




PedalPCB

Danube Fuzz

Revision 02.09.19

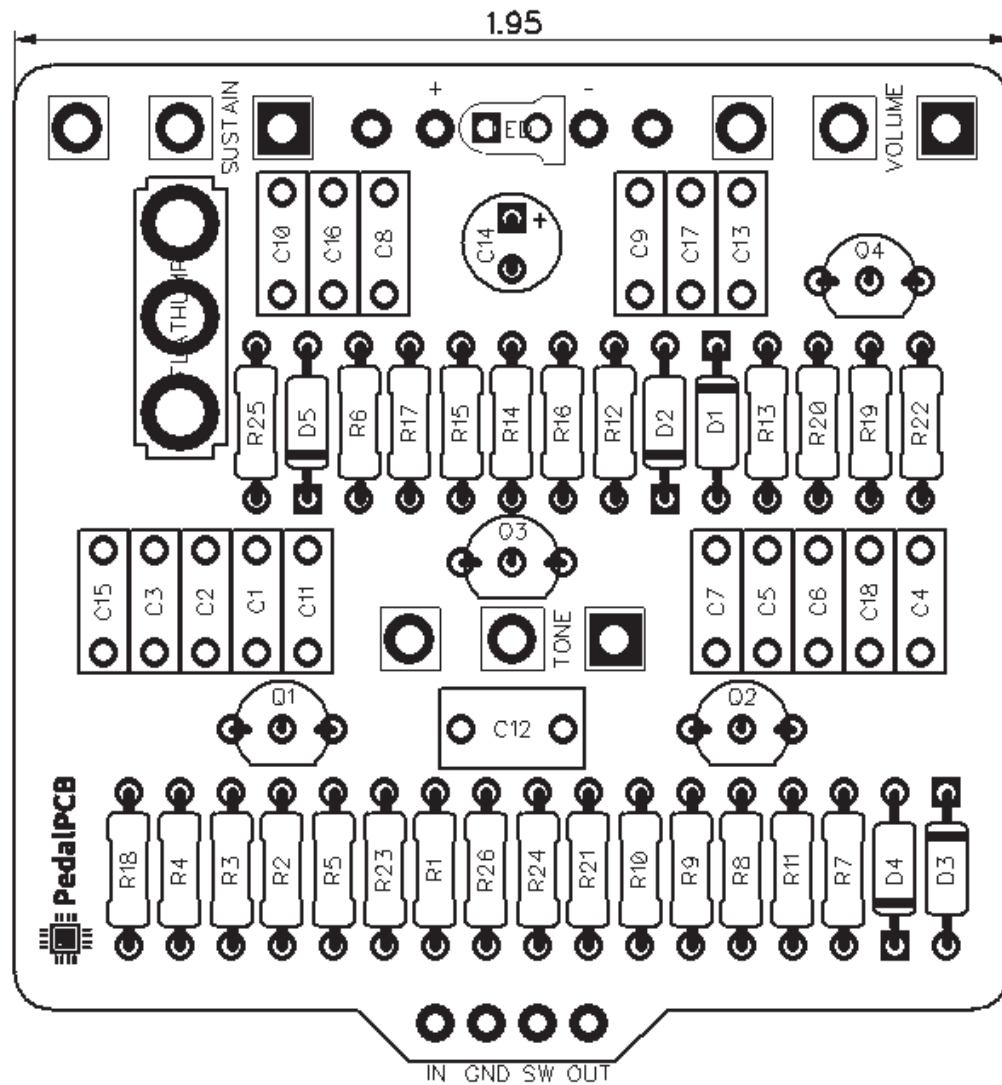

Controls

- Volume
- Sustain
- Tone
- Mids (toggle switch) - Flat / Hump

All trademarks and registered trademarks are the property of their respective owners. The company, product, and service names used in this web site are for identification purposes only. Use of these names, logos, and brands does not imply endorsement.

RESISTORS (1/4W)

R1 33K
R2 100K
R3 470K
R4 10K
R5 200R
R6 820R
R7 10K
R8 56K
R9 470K
R10 10K
R11 200R
R12 10K
R13 100K
R14 470K
R15 10K
R16 200R
R17 18K
R18 33K
R19 100K
R20 470K
R21 10K
R22 2K7
R23 1M
R24 100R
R25 100R
R26 18K

CAPACITORS

C1 68n
C2 560p
C3 47n
C4 100n
C5 100n
C6 560p
C7 100n
C8 100n
C9 560p
C10 6n8
C11 10n
C12 330n
C13 100n
C14 100u
C15 2n2
C16 6n8
C17 560p
C18 100n

TRANSISTORS

Q1 BC550C
Q2 BC550C
Q3 BC550C
Q4 BC550C

DIODES

D1 1N914
D2 1N914
D3 1N914
D4 1N914
D5 1N5817


POTENTIOMETERS

SUSTAIN B100K
TONE B50K
VOLUME A100K

SWITCHES


FLATHUMP SPDT (On/On)

Danube Fuzz

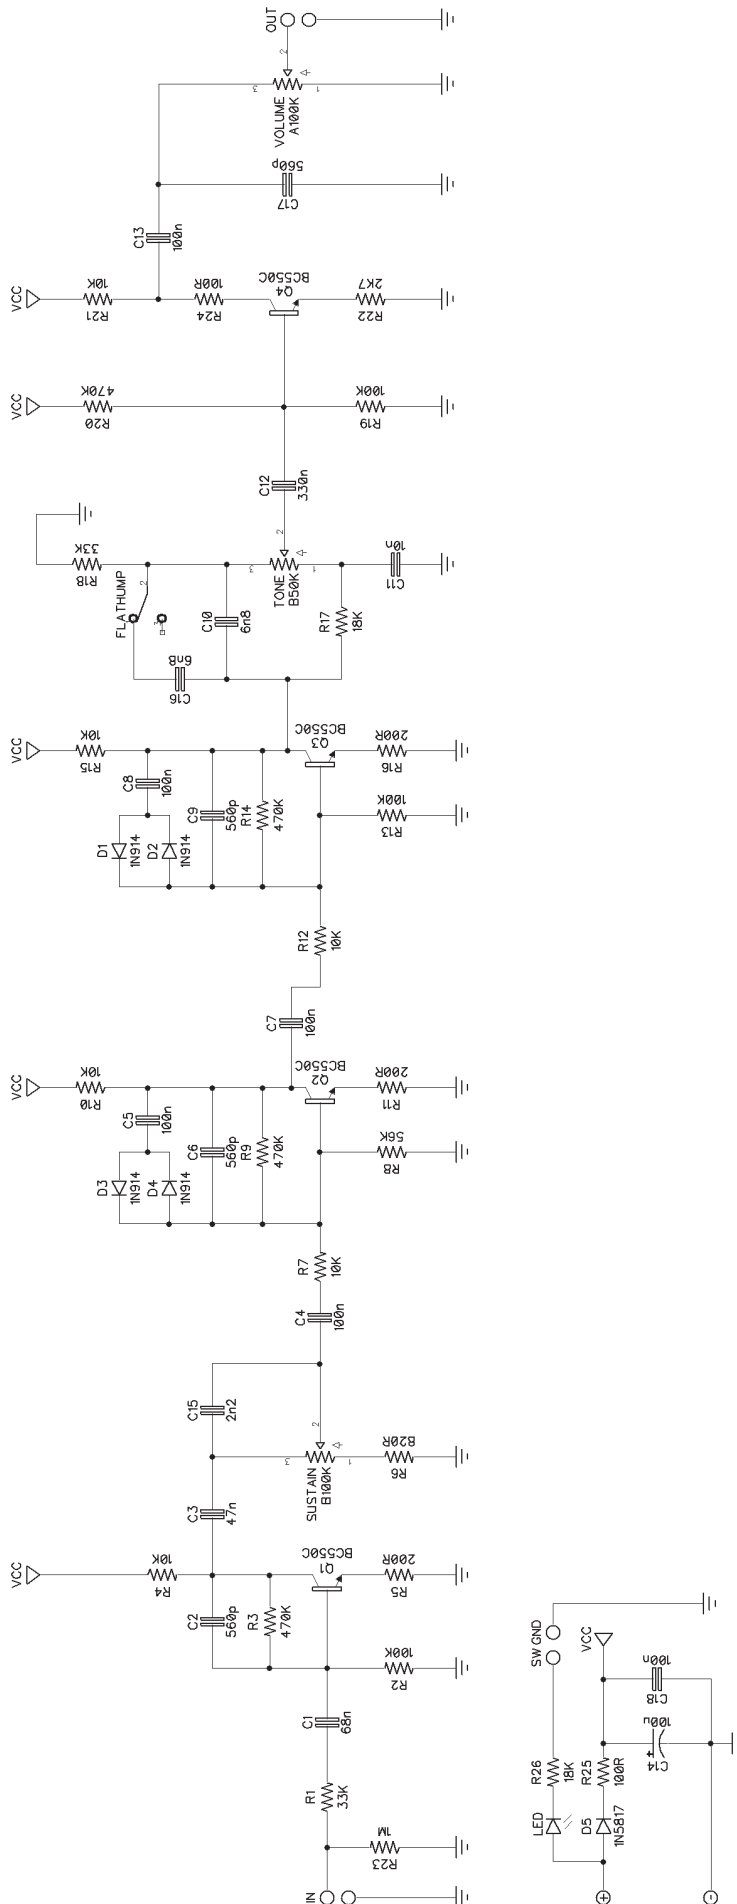

Danube Fuzz

Wiring Diagram

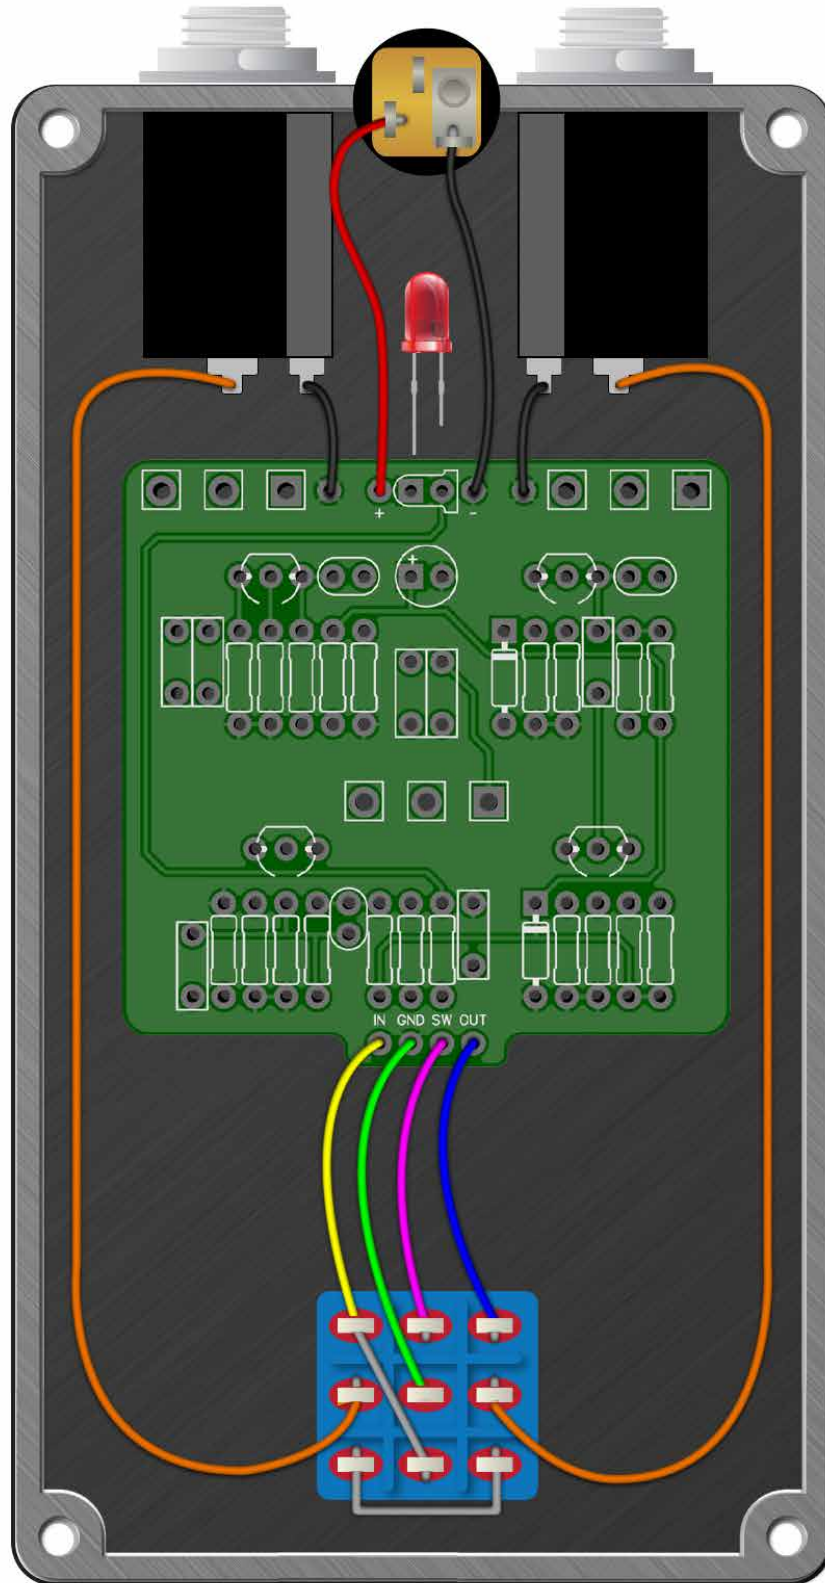

Danube Fuzz

Drill Template
125B enclosure with top mounted jacks

